

# Sprinkler Guards, Guards with Shields, and Water Shields

# **Product Description**

Sprinkler guards and water shields in this bulletin are independent components which are Listed or Approved with specific fire sprinklers. Sprinkler guards are designed to protect the sprinkler from damage due to incidental contact. Water shields are intended for use in racks or under grated walkways and prevent water from above from cooling and thereby delaying activation of the shielded sprinkler.

Refer to the guard selection table in this bulletin and sprinkler technical bulletins for listing and approval information regarding sprinkler and guard combinations.

**Note:** Guards, shields, and guard/shield combinations are NOT compatible with recessed sprinkler installations.

#### Model C Guards and Guard/Shield Assemblies

#### Model C-1 Guard

This guard is used with pendent, upright, horizontal sidewall, and vertical sidewall sprinklers and does not incorporate a water shield.

#### Model C-2 Guard

This guard is used with non-recessed dry pendent sprinklers.

#### Model C-3 Guards

This guard has a built-in water shield. When assembled to an upright sprinkler, the combination forms an upright intermediate sprinkler with guard.

#### Model C-5 Guard/Shield Assembly

This assembly is a Model C-1 guard supplied with either an S-1 water shield threaded onto 1/2"" sprinkler threads, or an S-2 water shield threaded onto 3/4" threads. The combination forms a pendent intermediate level sprinkler with guard.

#### Model D Guards and Guard/Shield Assemblies

#### Model D-1 Guard

These guards are used with pendent, upright, and horizontal sidewall sprinklers and do not incorporate a water shield.

#### Model D-3, D-6, and D-7 Guards

These guards have a built-in water shield. When assembled to an upright sprinkler, the combination forms an upright intermediate sprinkler with guard.

#### Model D-5 Guard/Shield Assembly

This assembly comprises a model D-1 guard supplied with either an S-1 water shield threaded onto 1/2"" sprinkler threads, or an S-2 water shield threaded onto 3/4" threads. The combination forms a pendent intermediate level sprinkler with guard.

#### Model D-8 Guard

This guard is used with pendent and upright sprinklers and does not incorporate a water shield.



Example: Model D1 Sprinkler Guard

#### Model D-9 Guard/Shield Assembly

This assembly is a Model D-8 guard supplied with an S-2 water shield that is threaded onto 3/4" sprinkler threads. The combination forms a pendent intermediate level sprinkler with guard.

#### Model D-14 Guard

Model D-14 sprinkler guards are FM Approved for in-rack installation only. Each guard is supplied with a 1" locknut that must be threaded onto the sprinkler prior to sprinkler installation. Where permitted by Table A, the guards may also be used in combination with the S-5 water shield which replaces the locknut. The guard may be mounted to the sprinkler either prior to or following installation of the sprinkler into an outlet.

#### **Model S Water Shields**

Model S Shields are threaded water shields designed to create a pendent intermediate level sprinkler when installed on an approved sprinkler. The water shields are UL listed and/or FM Approved with the sprinklers listed in Table A, Listed and Approved Sprinkler, Guard, and Water Shield Combinations.

#### Model S-1

Model S-1 (3-1/4" [83mm] diameter) water shields are threaded onto 1/2" sprinkler inlet threads prior to installation

#### Model S-2 and S-3

Model S-2 (3-1/4" [83mm] diameter) and S-3 (3-3/4" [95mm] diameter) water shields are threaded onto 3/4" sprinkler inlet threads prior to installation.

**Note:** Model S-3 water shields are intended and listed for use on Model JL14 and JL17 ESFR storage sprinklers.

#### Model S-5

Model S-5 (4-1/2" [114mm] diameter) water shields are threaded onto 1" sprinkler inlet threads prior to installation.

### Model 22 and 25 Sprinkler Guards

Model 22 and 25 sprinkler guards are FM Approved for in-rack installation only. Each guard is supplied with a 1" locknut that must be threaded onto the sprinkler prior to sprinkler installation. Where permitted by Table A, the guards may also be used in combination with the S-5 water shield which replaces the locknut. The guard is assembled to the sprinkler following installation of the sprinkler.

### Model F Guards and Guards with Shields

Model F guards and guards with shields are specifically designed for use with KFR sprinklers and various F1 and F1FR sprinklers being transitioned to KFR frames. These sprinklers are designated as "NEW" in Table A, "Listed and Approved Sprinkler, Guard, and Water Shield Combinations."

#### Model F-1, F-2, F-4, and F-7

These guards are used with pendent, upright, horizontal sidewall, and vertical sidewall sprinklers and do not incorporate a water shield.

#### Model F-3 Guard

This guard has a built-in water shield. When assembled to an upright sprinkler, the combination forms an upright intermediate sprinkler with guard.

#### Model F-5 Guard/Shield Assembly

This assembly is a Model F-1 guard supplied with an S-1 water shield that is threaded onto 1/2" sprinkler threads. The combination forms a pendent intermediate level sprinkler with guard.


#### Model F-6 Guard/Shield Assembly

This assembly is a Model F-2 guard supplied with an S-2 water shield that is threaded onto 3/4" sprinkler threads. The combination forms a pendent intermediate level sprinkler with guard.

#### Model F-8 Guard/Shield Assembly

This assembly is a model F-7 guard supplied with either an S-1 water shield which is threaded onto 1/2"" sprinkler threads, or an S-2 water shield threaded onto 3/4" threads. The combination forms a pendent intermediate level sprinkler with guard.



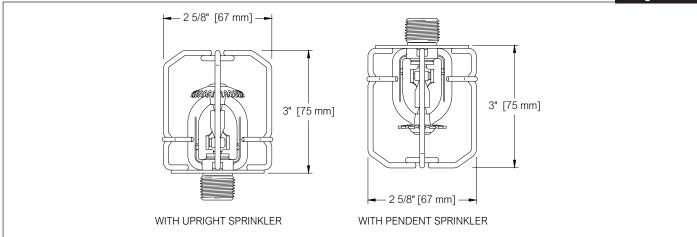

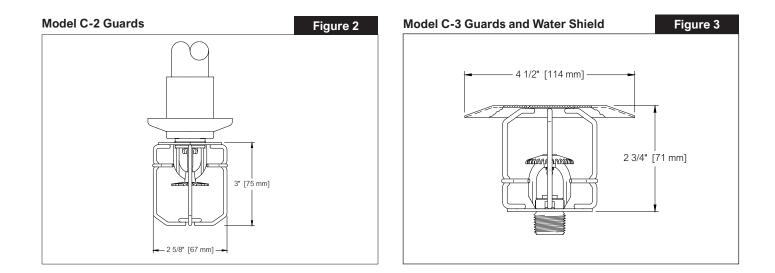


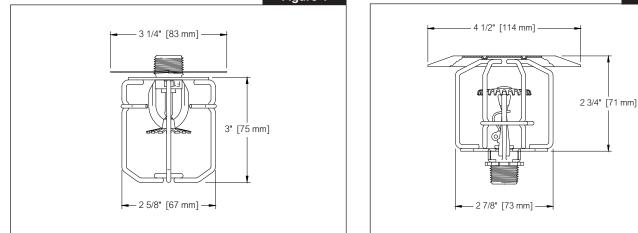



Figure 1


#### Model C-5 Guards and Water Shield

Figure 4

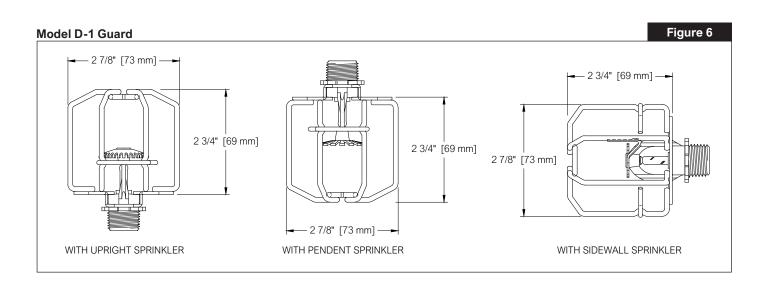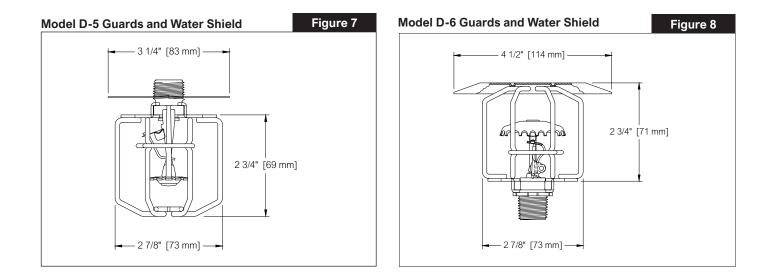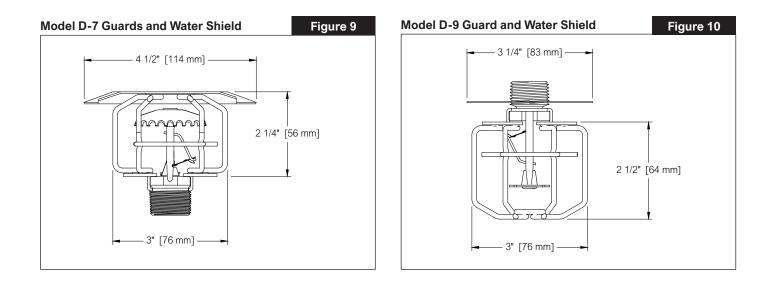
Figure 5













#### Model D-8 Guard

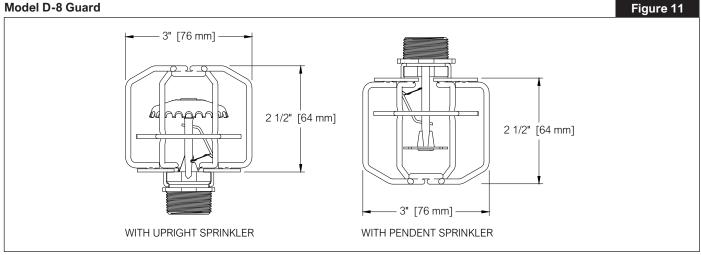


#### Model D-14 Guard

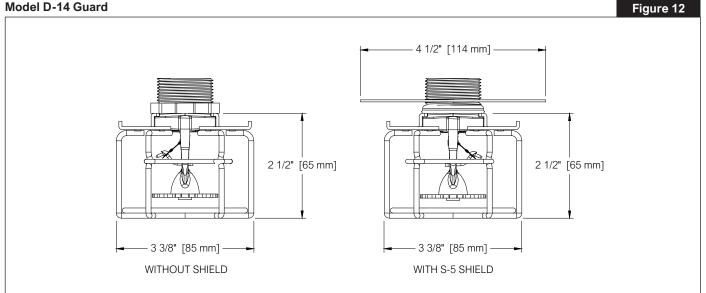







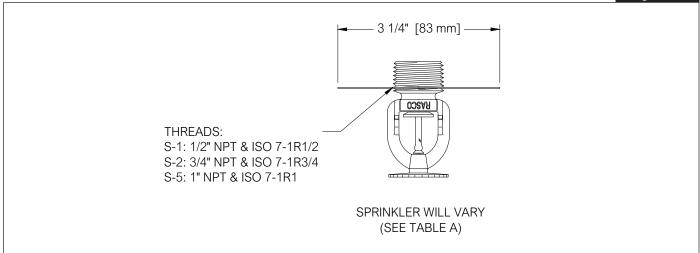


#### Model 22 Guard

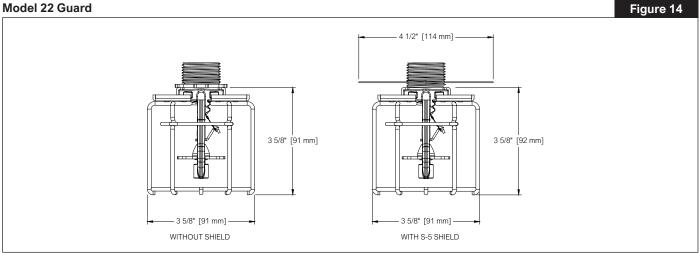

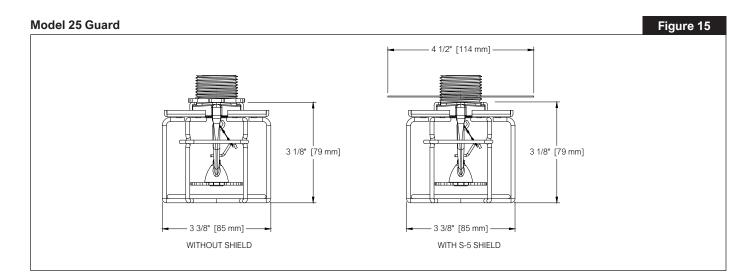





#### Model F-1 Guard

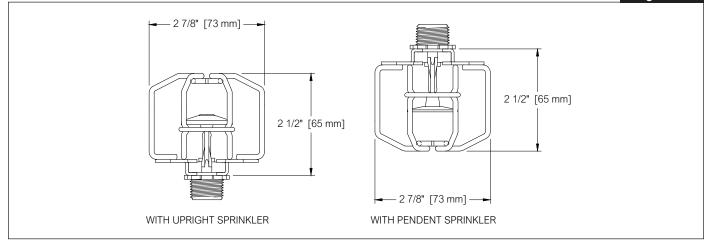




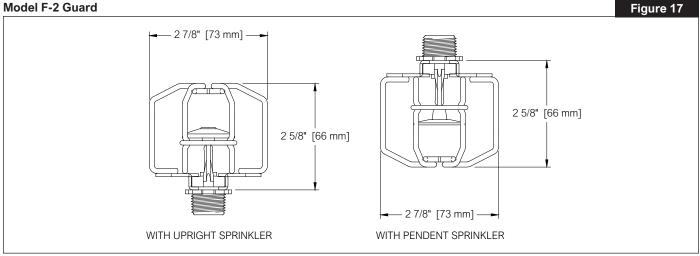


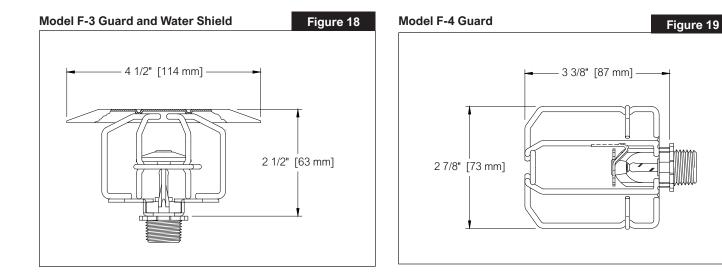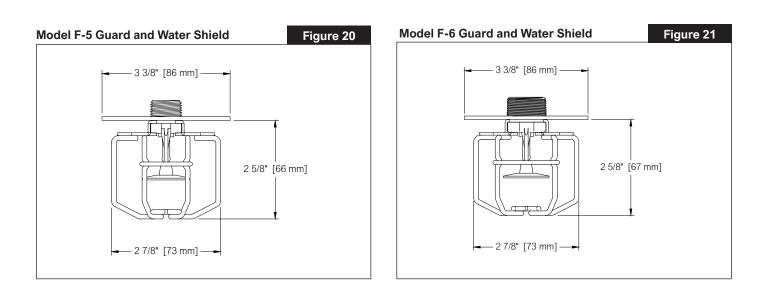






#### Model F-7 Guard

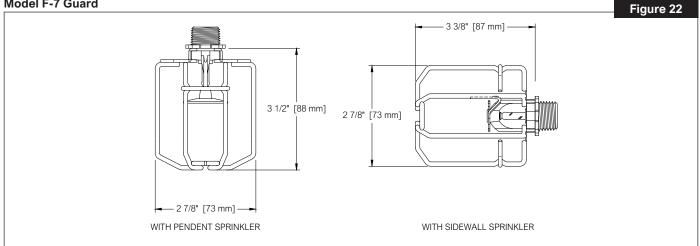

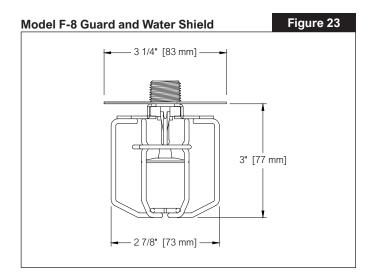



#### Listed and Approved Sprinkler, Guard, and Water Shield Combinations

Table A
---------

Sprinkler Model <sup>(1)</sup>	Type <sup>(2)</sup>	Sprinkler Identification Number (SIN)	Nominal K-Factor gpm/psi <sup>½</sup> (L/ min/bar <sup>½</sup> )	Sensitivity <sup>(3)</sup>	Threads NPT or ISO-7R	Approvals <sup>(4)</sup>	Guard, Guard and Shield or Water Shield Model		
F1-28 NEW <sup>(8)</sup>	Pendent	RA1311	2.8 (40)	SR	1/2	cULus	F-7 Guard F-8 Guard and Shield S-1 Shield		
	Upright	RA1321	2.8 (40)	SR	1/2	cULus	F-1 Guard F-3 Guard and Shield		
F1-42 NEW <sup>(8)</sup>	Pendent	RA1313	4.2 (60)	SR	1/2	cULus	F-7 Guard F-8 Guard and Shield S-1 Shield		
	Upright	RA1323	4.2 (60)	SR	1/2	cULus	F-1 Guard F-3 Guard and Shield		
	HSW	RA1335	5.6 (80)	SR	1/2	cULus	F-7 Guard		
	11000	1041000	0.0 (00)		1/2	FM	F-4 Guard		
	Pendent	DA1214	5.6 (80)	SR	1/2 -	cULus	F-7 Guard F-8 Guard and Shield S-1 Shield		
F1-56 NEW <sup>(8)</sup>	Fendent	RA1314				FM	F-1 Guard F-5 Guard and Shield S-1 Shield		
						cULus	F-1 Guard F-3 Guard and Shield		
	Upright	RA1325	5.6 (80)	SR	1/2 -	FM	F-1 Guard F-3 Guard and Shield		
		W RA1385	5.6 (80)	SD.	1/2	cULus	NA		
	VSW			SR	1/2	FM	F-2 Guard		
F1-56-300 NEW <sup>(8)</sup>	Pendent	RA2514	5.6 (80)	SR	1/2	cULus	F-7 Guard F-8 Guard and Shield S-1 Shield		
	Upright	RA2525	5.6 (80)	SR	1/2	cULus	F-1 Guard F-3 Guard and Shield		
F1-56SS					1/2	cULus	D-1 Guard D-5 Guard and Shield S-1 Shield		
	Pendent	RA6414	5.6 (80)	SR		FM	C-1 Guard C-5 Guard and Shield D-1 Guard D-5 Guard and Shield S-1 Shield		
	Upright	Upright RA6424 5.6 (80) SR	SR	1/2	cULus	D-1 Guard C-3 Guard and Shield D-3 Guard and Shield			
						FM	C-1 Guard C-3 Guard and Shield		
F1-80 NEW <sup>(8)</sup>	Pondont	Pondont	Pendent	DAC010	0.0 (115)	C D	2/4	cULus	F-7 Guard F-8 Guard and Shield S-2 Shield
	Pendent	RA6212	8.0 (115)	SR	3/4 -	FM	F-2 Guard F-6 Guard and Shield S-2 Shield		
	Upright	RA6222	8.0 (115)	SR	3/4	cULus	F-1 Guard F-3 Guard and Shield		
						FM	F-2 Guard F-3 Guard and Shield		
F1-80SS	Pendent	Pendent RA6412	8.0 (115)	SR	3/4	cULus	D-1 Guard D-5 Guard and Shield S-2 Shield		
			0.0 (113)			FM	C-1 Guard C-5 Guard and Shield S-2 Shield		
	Upright	RA6422	8.0 (115)	SR	3/4	cULus	D-1 Guard C-3 Guard and Shield D-3 Guard and Shield		
						FM	C-1 Guard C-3 Guard and Shield		



							Table A cont.
Sprinkler Model <sup>(1)</sup>	Type <sup>(2)</sup>	Sprinkler Identification Number (SIN)	Nominal K-Factor gpm/psi <sup>½</sup> (L/ min/bar <sup>½</sup> )	Sensitivity <sup>(3)</sup>	Threads NPT or ISO-7R	Approvals <sup>(4)</sup>	Guard, Guard and Shield, or Water Shield Model
F1FR28 NEW <sup>(8)</sup>	Pendent	RA1411	2.8 (40)	QR	1/2	cULus	F-7 Guard F-8 Guard and Shield S-1 Shield
	Upright	RA1421	2.8 (40)	QR	1/2	cULus	F-1 Guard F-3 Guard and Shield
F1FR42 NEW <sup>(8)</sup>	Pendent	RA1413	4.2 (60)	QR	1/2	cULus	F-7 Guard F-8 Guard and Shield S-1 Shield
	Upright	RA1423	4.2 (60)	QR	1/2	cULus	F-1 Guard F-3 Guard and Shield
	HSW	RA1435	5.6 (80)	QR	1/2 -	cULus FM	F-7 Guard F-4 Guard
	Pendent	RA1414	5.6 (80)	QR	1/2 -	cULus	F-7 Guard F-8 Guard and Shield S-1 Shield F-1 Guard
F1FR56 NEW <sup>(8)</sup>						FM	F-5 Guard and Shield S-1 Shield
	Upright	RA1425	5.6 (80)	QR	1/2 -	cULus	F-1 Guard F-3 Guard and Shield
	Oprigrit	10/1420			1/2	FM	F-1 Guard F-3 Guard and Shield
	VSW	RA1485		QR	1/2	cULus	NA
	0000	1141400	0.0 (00)	GIN	1/2	FM	F-2 Guard
	HSW	RA2634	5.6 (80)	QR	1/2	cULus	F-7 Guard F-7 Guard
F1FR56-300 NEW <sup>(8)</sup>	Pendent	RA2614	5.6 (80)	QR	1/2	cULus	F-8 Guard and Shield S-1 Shield
	Upright	RA2625	5.6 (80)	QR	1/2	cULus	F-1 Guard F-3 Guard and Shield
F1FR56SS						cULus	D-1 Guard D-5 Guard and Shield S-1 Shield
	Pendent	RA6514	5.6 (80)	QR	1/2	FM	C-1 Guard C-5 Guard and Shield D-1 Guard D-5 Guard and Shield S-1 Shield
	Upright	Upright RA6524	5.6 (80)	QR	1/2	cULus	D-1 Guard C-3 Guard and Shield D-3 Guard and Shield
						FM	C-1 Guard C-3 Guard and Shield
F1FR80 NEW <sup>(8)</sup>	Pendent	Pendent RA6312	8.0 (115)	QR	3/4 -	cULus	F-7 Guard F-8 Guard and Shield S-2 Shield
						FM	F-2 Guard F-6 Guard and Shield S-2 Shield
	Upright	ight RA6322	8.0 (115)	QR	3/4	cULus	F-1 Guard F-3 Guard and Shield
						FM	F-2 Guard F-3 Guard and Shield
F1FR80SS	Pendent	Pendent RA6512	8.0 (115)	QR	3/4 -	cULus	D-1 Guard D-5 Guard and Shield S-2 Shield
						FM	C-1 Guard C-5 Guard and Shield S-2 Shield
	Upright	RA6522	8.0 (115)	QR	3/4	cULus	D-1 Guard C-3 Guard and Shield D-3 Guard and Shield
						FM	C-1 Guard C-3 Guard and Shield



#### Table A cont. Sprinkler Nominal Threads Sprinkler Guard, Guard and Shield, Sensitivity<sup>(3)</sup> Type<sup>(2)</sup> Identification K-Factor gpm/psi<sup>1/2</sup> (L/ NPT Approvals<sup>(4)</sup> Model<sup>(1)</sup> or Water Shield Model or ISO-7R Number (SIN) min/bar<sup>1</sup>/2) Pendent R5314 SR cULus, FM C-2 Guard (5) 5.6 (80) 1 F3-56 Dry HSW R5334 5.6 (80) SR 1 FΜ C-2 Guard (5) Pendent R5714 5.6 (80) QR 1 cULus, FM C-2 Guard (5) F3QR56 Dry HSW R5734 5.6 (80) QR 1 FΜ C-2 Guard (5) cULus D-1 Guard R1231 2.8 (40) SR 1/2 R1233 4.2 (60) SR 1/2 cULus D-1 Guard D-1 Guard cULus HSW R1235 SR 1/2 5.6 (80) FM C-1 Guard R1236 8.0 (115) SR 1/2 cULus D-1 Guard R1237 8.0 (115) SR 3/4 cULus D-1 Guard cULus D-1 Guard R1011 SR 1/2 2.8 (40) FM C-1 Guard R1013 4.2 (60) SR 1/2 cULus D-1 Guard D-1 Guard D-5 Guard and Shield cULus S-1 Shield R1015 5.6 (80) SR 1/2 C-1 Guard Pendent FM C-5 Guard and Shield S-1 Shield D-1 Guard cULus D-5 Guard and Shield S-2 Shield R1017 SR 3/4 8.0 (115) C-1 Guard FΜ C-5 Guard and Shield G S-2 Shield cULus D-1 Guard R1021 SR 1/2 2.8 (40) C-1 Guard FM R1023 4.2 (60) SR 1/2 cULus D-1 Guard D-1 Guard cULus C-3 Guard and Shield D-3 Guard and Shield R1025 5.6 (80) SR 1/2 C-1 Guard FM C-3 Guard and Shield D-1 Guard Upright cULus C-3 Guard and Shield R1026 8.0 (115) SR 1/2D-3 Guard and Shield C-1 Guard FΜ C3 Guard and Shield D-1 Guard cULus C-3 Guard and Shield R1027 8.0 (115) SR 3/4 D-3 Guard and Shield C-1 Guard FΜ C-3 Guard and Shield VSW FM R1285 5.6 (80) SR 1/2 C-1 Guard R3131 QR cULus D-1 Guard 2.8 (40) 1/2 4.2 (60) R3133 QR 1/2 cULus D-1 Guard HSW D-1 Guard R3135 5.6 (80) QR 1/2cULus R3137 8.0 (115) QR 3/4 cULus D-1 Guard 1/2 R3111 2.8 (40) QR cULus D-1 Guard R3113 4.2 (60) QR 1/2 cULus D-1 Guard Pendent R3115 5.6 (80) QR 1/2 cULus D-1 Guard cULus D-1 Guard R3117 8.0 (115) QR 3/4 C-5 Guard and Shield FΜ GFR R3121 2.8 (40) QR 1/2 cULus D-1 Guard R3123 4.2 (60) QR 1/2 cULus D-1 Guard C-3 Guard and Shield R3125 5.6 (80) QR 1/2 cULus D-1 Guard Upright D-3 Guard and Shield C-3 Guard and Shield cULus D-1 Guard R3127 QR 3/4 8.0 (115) D-3 Guard and Shield FM C-3 Guard and Shield



# Table A cont.

						Table A cont.	
Sprinkler Model <sup>(1)</sup>	Type <sup>(2)</sup>	Sprinkler Identification Number (SIN)	Nominal K-Factor gpm/psi <sup>½</sup> (L/ min/bar <sup>½</sup> )	Sensitivity <sup>(3)</sup>	Threads NPT or ISO-7R	Approvals <sup>(4)</sup>	Guard, Guard and Shield, or Water Shield Model
GL112	Pendent	R3216	11.2 (160)	QR	3/4	FM	D-8 Guard D-9 Guard and Shield S-2 Shield
	Upright	R3226	11.2 (160)	QR	3/4	FM	D-7 Guard and Shield D-8 Guard
GQR112	Pendent	R605	11.2 (160)	QR	3/4	FM	D-8 Guard D-9 Guard and Shield S-2 Shield
	Upright	R606	11.2 (160)	QR	3/4	FM	D-7 Guard and Shield D-8 Guard Water Shield (factory installed)
GSR112	Pendent	R607	11.2 (160)	SR	3/4	FM	D-8 Guard D-9 Guard and Shield S-2 Shield
GORTIZ -	Upright	R608	11.2 (160)	SR	3/4	FM	D-7 Guard and Shield D-8 Guard Water Shield (factory installed)
0)// 0	Pendent	R2916	11.2 (160)	SR	3/4	FM	D-8 Guard D-9 Guard and Shield S-2 Shield
GXLO						cULus	D-6 Guard and Shield
	Upright	R2921	11.2 (160)	SR	3/4	FM	D-7 Guard and Shield D-8 Guard
HL22 Threaded	Pendent	RA1011	22.4 (320)	ESFR	1	FM	22 Guard <sup>(6)</sup> S-5 Shield <sup>(6)(7)</sup>
JL14	Pendent	RA1812	14.0 (200)	ESFR	3/4	FM	S-3 Shield
JL17	Pendent	RA1914	16.8 (240)	ESFR	3/4	FM	S-3 Sheild
KFR56	Pendent	RA3614	5.6 (80)	QR	1/2 -	cULus	F-7 Guard F-8 Guard and Shield S-1 Shield F-1 Guard F-5 Guard and Shield S-1 Shield
	Upright	RA3624	5.6 (80)	QR	1/2 -	cULus	F-1 Guard F-3 Guard and Shield F-1 Guard
	HSW	RA3634	5.6 (80)	QR	1/2 -	cULus	F-3 Guard and Shield F-7 Guard
	ПЭМ	RA3034	0.0 (00)	QR	1/2	FM	F-4 Guard
KFR56-300 -	Pendent Upright	5.6 (80) QR 1/2	5.6 (80)	- 5.6 (80)	1/2	cULus	F-7 Guard F-8 Guard/Water Shield S-1 Water Shield F-1 Guard F-3 Guard/Water Shield
	HSW	RA3934					F-7 Guard
KFR80			8.0 (115)	QR	3/4 -	cULus	F-7 Guard F-8 Guard and Shield S-2 Shield
						FM	F-2 Guard F-6 Guard and Shield S-2 Shield
	Upright	ght RA5422	8.0 (115)	QR	3/4	cULus	F-1 Guard F-3 Guard and Shield
						FM	F-2 Guard F-3 Guard and Shield
N25 Threaded	Pendent	RA0912	25.2 (360)	ESFR	1	FM	25 Guard <sup>(6)</sup> S-5 Shield <sup>(6)(7)</sup>
N252EC	Pendent	RA0842	25.2 (360)	QR	1	FM	25 Guard <sup>(6)</sup>
P22 Threaded	Pendent	R601	22.4 (320)	ESFR	1	FM	D-14 Guard <sup>(6)</sup> S-5 Shield <sup>(6)(7)</sup>
P25 Threaded	Pendent	R602	25.2(360)	ESFR	1	FM	D-14 Guard <sup>(6)</sup> S-5 Shield <sup>(6)(7)</sup>



#### Notes:

- 1. Sprinkler guards and water shields are listed and approved only for use with specific sprinklers. The use of any other guards or water shields on these sprinklers may impede their operation or distribution and negate all approvals and warranties.
- 2. HSW: Horizontal Sidewall; VSW: Vertical Sidewall
- 3. QR: Quick-response; SR: Standard-response; ESFR: Early Supression Fast Response.
- 4. In addition, SSL Approval for C-1, C-2, and C-3 guards and water shields.
- Model C-2 guards are listed and work only with standard and HB type escutcheons. Model C-2 guards cannot be used with FP or F1 recessed escutcheons.
- FM Approved for intermediate-level use only, such as in-rack, under conveyors, mezzanines, or other similar obstructions. Only for use with threaded sprinklers.
- 7. When used in combination with a guard, the S-5 Shield replaces the 1" lock washer provided with the guard.
- Sprinklers designated as "NEW" are updated versions of legacy sprinklers and MUST use F-series guards and guards with shields.

# **Listings & Approvals**

Refer to Table A. Listed and Approved Sprinkler, Guard, and Water Shield Combinations for information on Listings and Approvals applicable to each guard and water shield.

- 1. Listed by Underwriters Laboratories, Inc. and UL certified for Canada (cULus)
- 2. Certified by FM Approvals
- Scientific Services Laboratories (SSL, Australia)\*
  \* For Models C1, C2, C3 guards.

# Installation

#### Model C-1, C-2, and C-3 Guards

Install the sprinkler in accordance with the applicable sprinkler installation instructions prior to installing the Model C guard. With both clips unhooked, slightly spread open the guard. Insert steel plate into the installed sprinkler between the threads and the wrench flats. The steel plate tabs should face the sprinkler wrench flats and four contact points engage the sprinkler neck.

For Model C-2, the steel plate fits into the groove in each wrench flat and the guard is located by the notch in both steel plates. Snap the upper locking clip into place, then close the near clip. The guard is now securely installed in place. If locking clip requires too much force to snap closed or open, slightly flex the wires on both sides of the clip and either close or open the clip.

#### Model C-5 Guard/Shield Assembly

Prior to installing sprinkler into fitting, thread the Model S-1  $(1/2^{\circ})$  or S-2  $(3/4^{\circ})$  water shield onto the sprinkler. After installing sprinkler into fitting, install the Model C-1 Guard per the instructions above.

#### Model D Guards

Model D series guards and water shields are designed to be installed on the sprinkler <u>prior to sprinkler installation</u>. Assemble the guard on the sprinkler using the following technique:

With both cups unhooked, slightly spread open the guard. Insert steel plate into the installed sprinkler between the threads and the wrench flats. The steel plate tabs should face the sprinkler wrench flats and four contact points should engage the sprinkler neck.

Snap the upper locking clip (steel plates) into place. Close the lower clip at the top of the guard and slide it down to the notch. After installing the guard, thread EITHER a lock nut (for guard only) OR a water shield (for guard/shield assembly) onto the sprinkler threads. The final assembly can then be installed into a fitting using the wrench indicated in Table B "Wrench for Installation of Guard, Water Shield, and Sprinkler Assembly." Tighten the lock nut or water shield securely against the guard.

#### Model F Guards

Model F series guards and guards with shields are designed to be installed on the sprinkler prior to installation. The assembly is then installed with the wrench indicated in Table B, Wrench for Installation of Guard, Water Shield, and Sprinkler Assembly.

#### Models F-1, F-2, F-3, F-4 & F-7

Assemble the guard on the sprinklers using the technique described for the Model D-1, then install a 1/2" or 3/4" locking nut on the NPT threads until the nut is tight against the guard.

#### Models F-5, F-6, & F-8

Assemble the guard on the sprinklers using the technique described for the Model D-1, then install a 1/2" or 3/4" threaded water shield on the NPT threads until the shield is tight against the guard.

#### Model 22 & 25 Guards

Install the provided locknut on the sprinkler threads prior to installation of the sprinkler. Install the sprinkler in accordance with the applicable sprinkler installation instructions. With both clips unhooked, slightly spread open the guard. Insert the guard over the installed sprinkler so that the base plate of the guard attaches to the wrench flats of the sprinkler. Connect both locking clips to the adjacent tines of the guard. Tighten the locknut against the base plate of the guard.

#### **Model S Water Shields**

Model S water shields are designed to be installed on the sprinkler prior to installation. Thread the Model S water shield onto the sprinkler by hand, making sure that the shield does not pass by the end of the threads near the wrench boss. Install the sprinkler/shield assembly with the wrench indicated in the appropriate Technical Bulletin for the sprinkler.

#### Installation Notes

- 1. For all products incorporating a lock-nut feature, the lock-nut is part of the listed assembly. Failure to install the lock-nut will void the listing of the product and may lower the impact tolerance of the device.
- 2. The products in this bulletin are NOT compatible with recessed or concealed sprinkler installations.



#### Wrench for Installation of Guard, Water Shield and Sprinklar Assambly

Shield, and Sprink			
Guard/ Water Shield	Required Wrench for Installation of Guard, Water Shield, and Sprinkler Assembly		
D-1			
D-3	Model W13 K5.6 and smaller spr		
D-5		in inclusion	
D-1	Model W14 K8.0 sprinklers		
D-3			
D-5			
D-6	- Model W15		
D-7			
D-8			
D-9			
D-14	Model W16		
F (All)	Model W14		
K22	Model W16		
K25			

## **Finishes**

Guard Finishes	Table C		
Standard	Special Application		
Zinc plated with clear chromate	Enamel red paint Custom color paint Bright Chrome Satin Chrome		

#### Notes:

- Guards are formed from steel and are not considered 1. corrosion resistant.
- 2. The Model C1 guard is available FM Approved in Type 316.

#### Water Shield Finishes

Water Shield Finishes	Table D
S Series Wa	ater Shields
Standard	Special Application
Galvanized	Enamel red paint Custom color paint

Note: Special application finishes are special order only and will require additional lead time.

# **Ordering Information**

#### Specify:

- - - -

- Guard, Guard with Shield, or Shield Model •
- Sprinkler Thread Size (required for Model D-5 only) •
- Finish (See tables C and D) •
- Wrench (See table B) •

Note: Factory installation of Models D and F guards is available at additional cost. Please contact your Reliable representative for details.

